

Manual instructions:

Washing

1. Turn the handle to open
2. Fill in without stuffing
3. Close the door
4. Select the water temperature
5. Do not add detergent
automatic injection
6. Dial the number of your machine
7. Pay the amount indicated on the screen
8. Washing starts
9. At the end of the cycle,
the door automatically opens

Drying

Do not tumble dry:

wool, rhovyl, damart, dacron (polyester), plastic, rubber

Only tumble dry machine washable laundry

1. Sort out your clothes.

Do not stuff the dryer

2. Close the door of the dryer

3. Select the temperature

4. Dial the number of your dryer

5. Pay the amount indicated on the screen

6. Drying starts

You can open the door during the drying cycle to take out your laundry.
Press the button to start again

Gestion by SMS

To know the available number of machines, send « **dispo** » to [+33 7 68 55 99 76](tel:+33768559976)

To be informed of the end of the cycle of your machine :

1. At the beginning of the washing cycle, a code (ex A001) will appear on the screen of the machine for 2 minutes

2. Text the code to [+33 7 68 55 99 76](tel:+33768559976)
3. Check « Y » is written on the screen of the machine
4. Receive a text 5 minutes before the end of the washing cycle
5. Receive text when your laundry is ready

This launderette is under your responsibility and on CCTV.

The direction is not responsible for robbery and wrong use of the machines.

Read carefully the instructions before using the machines.

The dryers are for costumers as a priority.

Costumers are allowed to empty a machine at the end of a cycle.

For a better and longer efficiency, please respect the machines and the instructions.